TECHNICAL DATA

supported modes RS422 – RS422 RS422 – RS485

RS422 – RS485 RS422 – controlled RS422

 $\begin{array}{lll} \mbox{maximal transfer rate} & 3 \mbox{ Mb/s} \\ \mbox{maximal line} & 1 200 \mbox{ m} \\ \mbox{selectable terminator} & 100 \mbox{/ } 120 \mbox{ } \Omega \\ \mbox{connector RS422 side} & \mbox{screw} \\ \mbox{connector RS422/RS485 side} & \mbox{screw} \\ \mbox{overvoltage (soft) protection - line} & 600W/1ms \\ \mbox{overvoltage (soft) protection - mains} & 600W/1ms \\ \mbox{optical indication (LED)} & \mbox{red} \\ \end{array}$

 $\begin{array}{cccc} \text{red} & \text{PWR} \\ \text{yellow -} & \text{transfer} & \leftarrow \end{array}$

 $\begin{array}{ccc} & & \text{green - transfer} & \rightarrow \\ \text{power supply} & 9 - 30 \text{ V DC} \end{array}$

10 - 24V AC max 1.5 W

 $\begin{array}{ll} \textbf{power consumption} & \text{max } 1.5 \ \text{W} \\ \textbf{dimension} & 90 \ \text{x} \ 52 \ \text{x} \ 58 \text{mm} \end{array}$

CONDITIONS OF WARRANTY

ComErgon Ltd. provides full warranty of 12 month for serial interface module DIN 2.2/422R starting on the day of purchase.

The warranty is except for the cases in which the functioning of the module has been affected by faulty manipulation, natural catastrophes or other external factors.



tel.: +421-2-**4445 8783** tel./ fax.: +421-2-**4425 9006** Pionierska 15, 831 02 Bratislava Slovak Republic

e-mail: service@comergon.sk http: www.comergon.sk




DIN serie

DIN 2.2|422R

repeater RS422 RS422 – controlled RS422 RS422 – RS485

CONNECTOR AND JUMPER LAYOUT

RS 485 RS 422 controlled RS 422

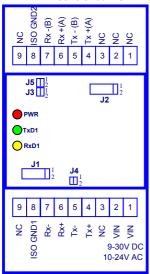

controlled RS 422 RS 422

STANDARD SETTING - mode repeater RS422

terminator
mode for RS422/RS485 side
transmitter control
receiver control
pull-up, pull-down for receiver

 $\begin{array}{c} 100 \ / \ 120 \ \Omega \\ RS422 \\ permanent \\ permanent \\ ON \end{array}$

OPERATING MODE SETTING

| JUMPER | POSITION | FUNCTION |
|---------|--------------|----------------------------|
| J5 | 1 - 2, 3 - 4 | mode RS485 |
| | - | mode RS422 |
| | 1 - 2 | terminator |
| | 3 - 4 | pull-up for receiver |
| J1 (J2) | 5 - 6 | pull-down for receiver |
| | 7 - 8 | pull-up for transmitter |
| | 9 - 10 | pull-down for transmitter |
| | 1 - 2 ON * | transmitter control by TxD |
| J4 (J3) | 1 - 2 OFF * | transmitter permanent |
| | 3 - 4 ON * | receiver inverse to TxD |
| | 3 - 4 OFF * | receiver permanent |

^{*} **ON** – jumper connected, **OFF** – jumper open

J1, J4 - RS422 side

J2, J3, J5 - RS422/RS485 side

LINE CONFIGURATION - RS422/RS485 side

